



**1880452**


## **K-Mobi Desk-Espresso**

### **Parts List**


A.	Left Side Frame	1 pc
B.	Right Side Frame	1 pc
C.	Back Frame	1 pc
D.	Top Panel	1 pc
E.	Middle Panel	1 pc
F.	Bottom Panel	1 pc
G.	Angle Braces	2 pcs
H.	Phillips Head Screws	17 pcs
I.	Sunk Allen Head Bolts	8 pcs
J.	Flat Allen Head Bolts	2 pcs
K.	Lock Washers	2 pcs
L.	Flat Washers	2 pcs
M.	Allen Head Wrench	1 pc
N.	Optional Allen Head Screwdriver Bit	1 pc
O.	Phillips Head Screwdriver	1 pc

- \* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.
- \* This item is to be assembled by an adult and is not intended to be taken apart by a child.

### **Hardware Illustrations**




**H. Phillips Head Screw**



**J. Flat Allen Head Bolt**



**L. Flat Washer**



**I. Sunk Allen Head Bolt**



**K. Lock Washer**



**1880452**


## K-Mobi Desk-Espresso

### Attach Back Frame

#### Parts required

A.	Left Side Frame	1 pc	I.	Sunk Allen Head Bolts	8 pcs
B.	Right Side Frame	1 pc	M.	Allen Head Wrench	1 pc
C.	Back Frame	1 pc	N.	Optional Allen Head Screwdriver Bit	1 pc

1. **Attach Back Frame (C)** Align the pre-drilled drilled holes in the Back Frame (C) with the pre-threaded holes in the Left & Right Side Frames (A, B). Be sure the brackets of Back Frame (C) face inward. Secure, but do not tighten with Sunk Allen Head Bolts (I) using Allen Head Tool (M or N). See Illustration #1.

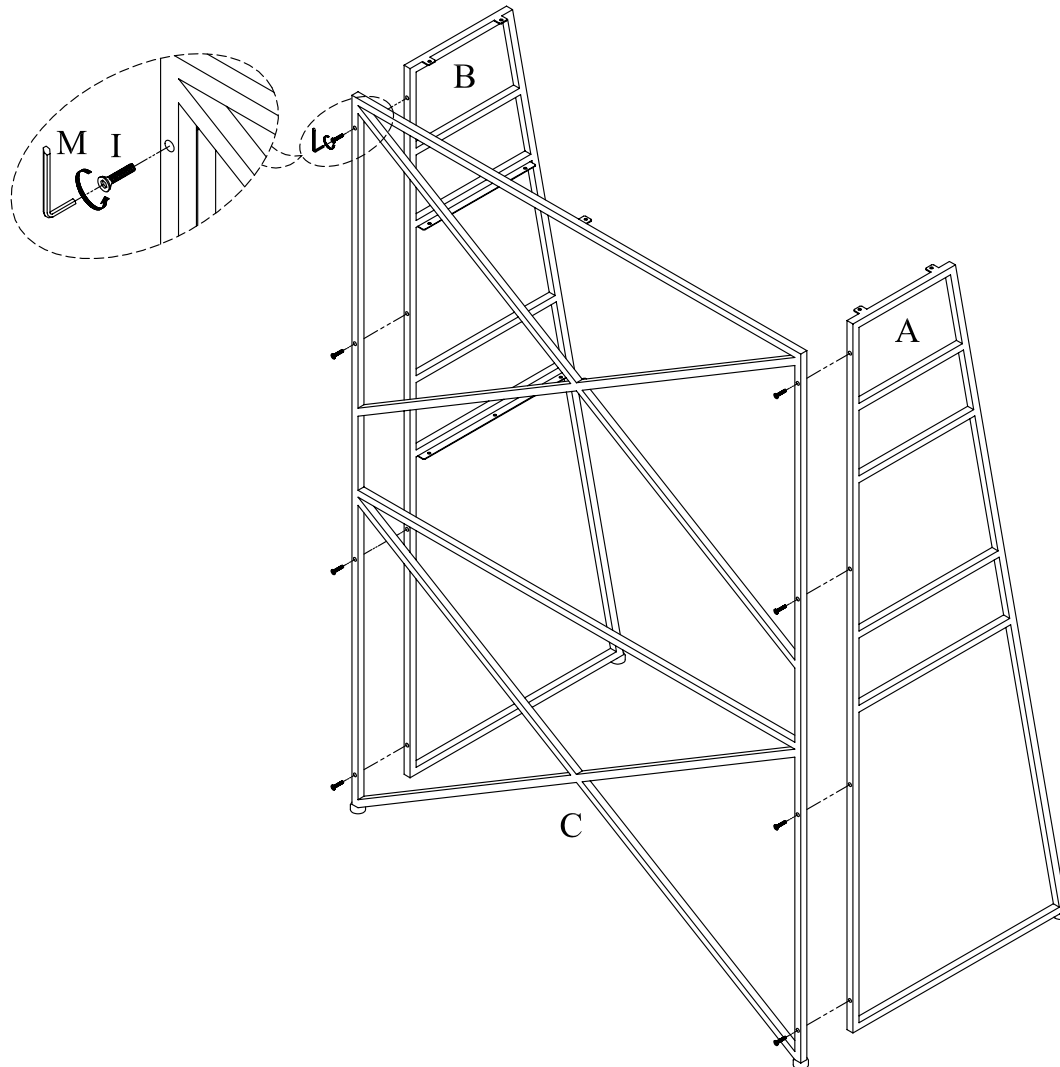

Illustrsation #1

### Attach Top, Middle & Bottom Panels and Angle Brace

#### Parts required




**1880452**

## **K-Mobi Desk-Espresso**

A.	Left Side Frame	1 pc	H.	Phillips Head Screws	17 pcs
B.	Right Side Frame	1 pc	J.	Flat Allen Head Bolts	2 pcs
C.	Back Frame	1 pc	K.	Lock Washers	2 pcs
D.	Top Panel	1 pc	L.	Flat Washers	2 pcs
E.	Middle Panel	1 pc	M.	Allen Head Wrench	1 pc
F.	Bottom Panel	1 pc	N.	Optional Allen Head Screwdriver Bit	1 pc
G.	Angle Braces	2 pcs	O.	Phillips Head Screwdriver	1 pc

2. **Attach Top Panel (D)** Align the pre-drilled holes in the Top Panel (D) with the pre-drilled holes in the top bracket of Back Frame (C) and top rails of Left & Right Side Frames (A, B). Secure with Phillips Head Screws (H) using Phillips Head Screwdriver (O). See Illustration#2
3. **Repeat step 2 to attach Middle & Bottom Panels (E, F). Tighten all the bolts at this time.**
4. **Attach Angle Braces (G) to the Left & Right Side Frames (A, B)** Align the larger holes in the Angle Braces (G) with the pre-threaded holes on the inside of Left & Right Side Frames (A, B). Secure with Flat Allen Head Bolts (J), Lock Washers (K) and Flat Washers (L) using Allen Head Tool (M or N). See Illustration #2.

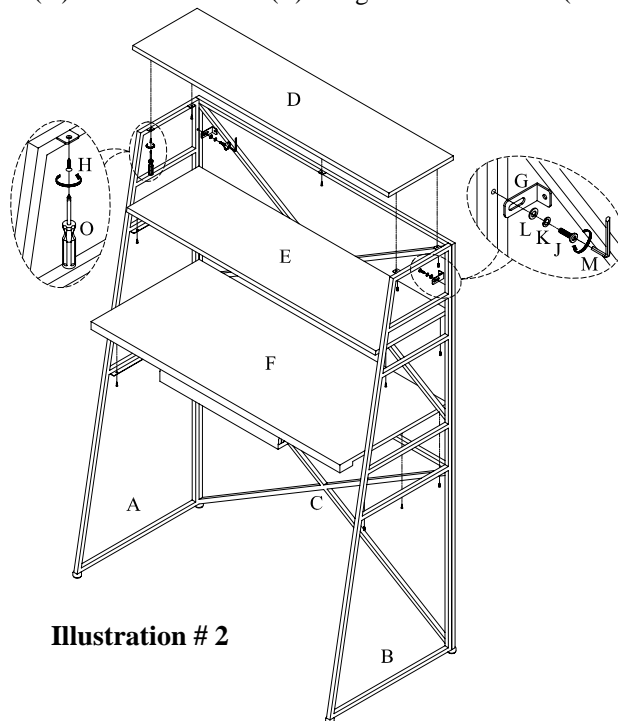

**Illustration # 2**

The underside of the bottom panel has one set of pre-drilled holes to accommodate our Bombay KIDS Keyboard Tray (Item# 1870941 - Black or Item# 1870970 - White).

### **Attach the Angle Brace to the Wall**



**1880452**

## **K-Mobi Desk-Espresso**

5. **Attach Angle Brace to Wall** Place the desk in the desired location against the wall. Mark the location for the Angle Brace through the space under the Top Panel . Attach the Angle Brace to the wall. See note below for attachment hardware.

### **Note Regarding Attachment Hardware:**

Hardware will be needed to secure this item to the wall in your home. Due to the many different types of materials used in home construction you will need to choose an appropriate wall fastener to ensure this item is securely attached to the wall. Please consult your local hardware specialist in selecting appropriate hardware and determining proper installation procedures based on your particular needs.